

Dopo aver smontato il portatarga di serie, preparare il supporto con le rondelle. (Fig. 1). Recuperare i 4 gommini e relative boccole dal portatarga originale

*Remove original one. Prepare the stirrup with the washers. (Picture 1).
Get back 4 rubbers and their bushes from original plastic holder.*



FIG.1

Infilare la rondella in dotazione nel gommino e successivamente inserire quest'ultimo nel supporto. Inserire poi la boccola dal basso verso l'alto. **Attenzione** la rondella deve trovarsi nella parte inferiore del supporto. (Fig. 2).

*Insert washer in the rubber and put all into the support. After that insert the bush from low side. **Warning** washer has to be located in the low side of support as showed. (Picture 2).*

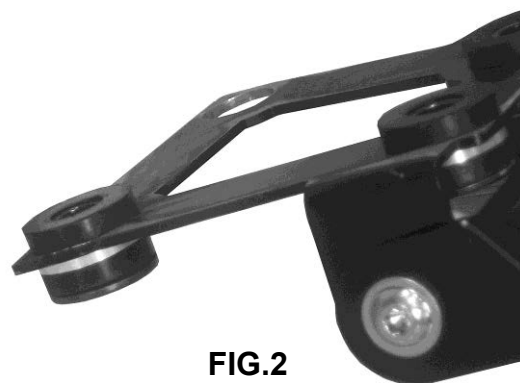


FIG.2



Nel caso il fanale posteriore non integrasse la luce portatarga, è possibile acquistare separatamente la luce portatarga VMC disponibili in due versioni.

In case the rear light of the bike doesn't include the license plate light, there is the possibility to buy it separately, choosing from 2 VMC models:



Cod: PRTL01



Cod: PRTL02